# galassi & ortolani s.p.a.

valvole speciali per l'industria

Via Ghirlandaio, 2/4 20096 Pioltello -MI- (Italy) Tel. ++39-02-92103459 Tel. ++39-02-92103801/02 Fax ++39-02-92103804 http://www.galassiortolani.com E-mail: info@galassiortolani.com

#### **Instruction Manual**

#### **Butterfly valve model GS.34-34W**

In the model GS.34-34W valves, butterfly rotation is controlled by a hand operated reducer, fixing the butterfly firmly in any position from 0° to 90°.

The reducer also makes adjustment easy even for maximum flow diameters.

To maintain a high, level of efficiency it is advisable to put in a new coupling and butterfly when required.

### To replace the coupling and butterfly:

- 1. Remove bolts, washers and nuts (part.10-14-15) and take off the reducer.
- 2. Remove bolts, washers and nuts (part.11-12-13) and open the top of the valve body (part.3) off the lower (part.4).
- 3. With the butterfly disk in a open position, press down the coupling and slide out the butterfly.

## To re-assemble:

- 1. Slide the longer shaft of the butterfly into the coupling hole, press down the coupling and insert the shorter end.
- 2. Insert the butterfly with the coupling into the valve body seats, bolt and insert the reducer.

**N.B.** All part numbers will be found in our technical and parts catalogues.