

**GALASSI&ORTOLANI S.p.A.**  
**VALVES MANUFACTURE DIVISION**

Via Ghirlandaio,2/4  
20096 Pioltello-MI-(Italy)  
<http://www.galassiortolani.com>  
E-mail:[info@galassiortolani.com](mailto:info@galassiortolani.com)

Tel. +39-02-92103459  
Tel. +39-02-92103801/02  
Fax +39-02-92103804

## **INSTRUCTIONS FOR STORAGE**

- 1) To avoid the deterioration of the material, it's suggested to preserve the valves in their cases until the assemblage.
- 2) Before the installation, it's suggested to preserve the valves in a protected environment, temperature not inferior to 0°cc.
- 3) About the pneumatic valves, it's only suggested to close (or plugging) the air-junctions of the valve.
- 4) If the time of storage is more than 40 days, it's suggested to keep all the pneumatic valves (normally close) in opening position, as per following instructions:
  - to put air into the pneumatic-structure, so that the valves will be positioned in "opening position"
  - to screw the handwheel up to the end, and then cut off the air.  
In this way the valve remain open.

At the time of installation take pneumatic valves back to the original position (normally close), through unscrewing of the handwheel.